 
 
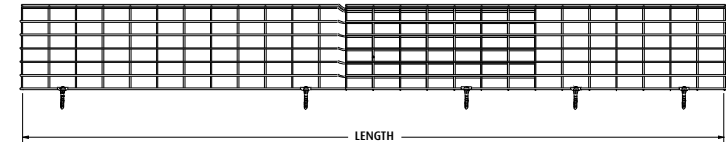 
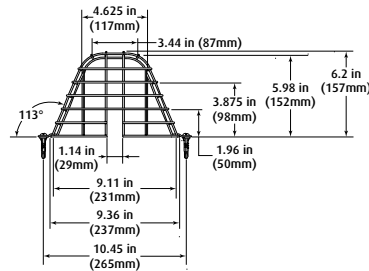 


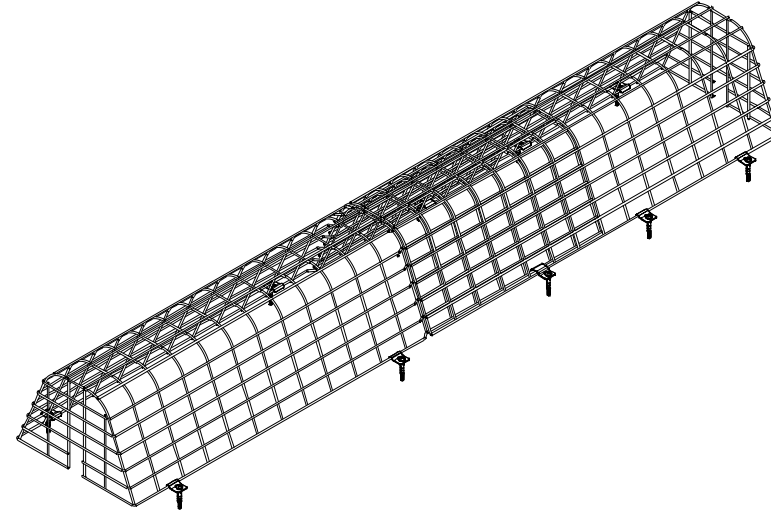

**Safety Technology International, Inc.**  
 2306 Airport Road • Waterford, Michigan 48327-1209  
 Teléfono: 1-248-673-9898 • Fax: 1-248-673-1246  
 E-mail: info@sti-usa.com  
 Sitio Web: www.sti-usa.com

**Safety Technology International (Europe) Ltd.**  
 Unit 49G Pipers Road • Park Farm Industrial Estate • Redditch  
 Worcestershire • B98 0HU • Inglaterra • Tel: 44 (0) 1527 520 999  
 Fax: 44 (0) 1527 501 999 • Llamada sin cargo: 0800 085 1678 (Reino Unido únicamente)  
 E-mail: info@sti-europe.com • Sitio Web: www.sti-europe.com

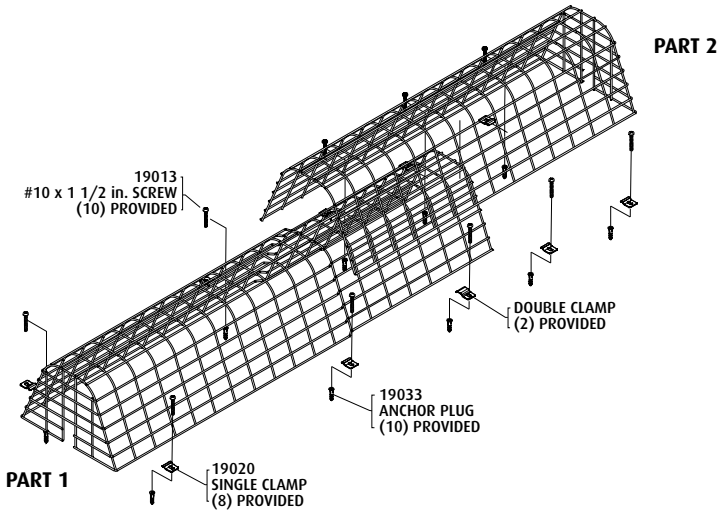

### INSTALLATION INSTRUCTIONS

1. Align guard (part 1) over existing fluorescent light.
2. Mark (4) mounting holes. Set guard aside. Drill holes 1/4 in. (6.3mm) diameter and insert anchors into ceiling. Install screws through clamps and into anchors. Do not tighten.
3. Position guard over light. Slide clamps onto top wire of guard and tighten screws.
4. Align guard (part 2) over existing fluorescent light guard. Have a minimum of 1 section of wire overlapping.
5. Repeat steps 2 and 3.
6. Mark and drill holes for double clamp where part 1 and part 2 overlap. Insert anchors into ceiling. Install screws through clamps and into anchors and tighten.

**LENGTH                      MAXIMUM                      MINIMUM**

<b>STI-9880</b>	62.75 in. (1593mm)	51 in. (1295mm)
<b>STI-9881</b>	98.25 in. (2495mm)	74.75 in. (1898mm)

### SERVICE

To service the unit, loosen but do not remove (5) screws on one side of guard. Slide clamps away from wire. Carefully rotate guard away from light fixture to service.

## INSTALLATION OF STI-9880 & STI-9881 FLUORESCENT LIGHT FIXTURE GUARD

All specifications and information shown were current as of publication, and are subject to change without notice.

9880 JUNE2011