For WDU Remote Sensors

# Remote Temperature Sensor

- Locate Sensors Remotely
- Average up to 3 Sensors!
- Accuracy: +/- ½°C, +/- 1°F
- 4 Wire Connection, 300 ft
- **Auto Detect Installation**



## Wall Display Unit Remote Sensor

The RS15 is a remote wall mount temperature sensor for TS15 and TS36 wall display units. Up to four remote sensors can be connected to the WDU remote sensor connector.

#### **Auto Detect**

When remote sensors are attached to the WDU, the unit will automatically scan for the connected remote sensors and configure itself for the attached sensors. Each sensor can be calibrated independently.

#### Sensor functions:

Address 1: Use the Remote Sensor instead of the internal sensor


Address 2: Average Remote Sensor 2 with internal sensor (or Remote Sensor Address 1 if present)

Address 3: Average Remote Sensor 3 with remote sensor 2 and internal sensor (or Remote Sensor Address 1 if present)

Address 4: Use Remote Sensor for outside temperature (can be used with all other combinations)


Sensor Address setting on SW1:

Address 1: Address 2: Address 3: Address 4: A1 = offA1=on A1=off A1=on A2=off A2=off A2=on A2=on

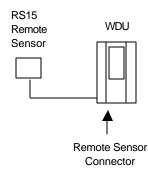

### **Sensor Connection**

The RS15 connects to the remote sensor terminals on the wall display units. Maximum cable length is 300 Ft of twisted pair wire.

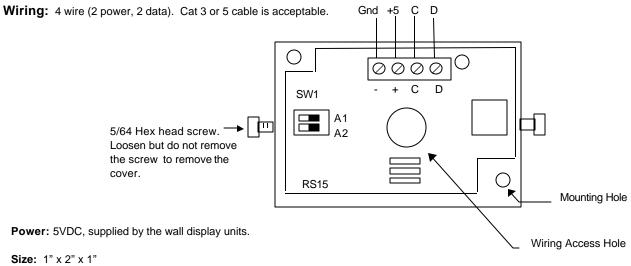

**Ordering Information:** Model Part Number **RS15** 

Remote Temperature Sensor, Wall Mount, SensorLink 001-00402