


**O1 to O4** - Wire the positive lead of the device to the AUX terminal and the negative lead to the required output terminal (O1 to O4).

**!** **Output O1 is supervised in the same manner as the BELL Output of the PC5010. If O1 is not used, if no continuous load is connected, or if a siren is connected, a 1000Ω resistor must be connected in order to prevent the indication of a trouble condition (see diagram below).**

The following is an example of how to wire various devices to the outputs:

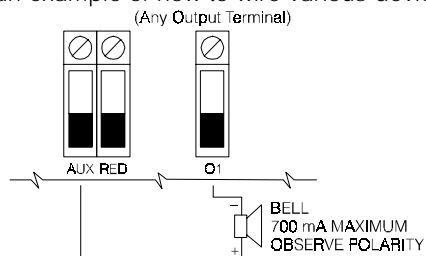

**Limited Warranty** Digital Security Controls Ltd. warrants that for a period of twelve months from the date of purchase, the product shall be free of defects in materials and workmanship under normal use and that in fulfillment of any breach of such warranty, Digital Security Controls Ltd. shall, at its option, repair or replace the defective equipment upon return of the equipment to its factory. This warranty applies only to defects in parts and workmanship and not to damage incurred in shipping or handling, or damage due to causes beyond the control of Digital Security Controls Ltd. such as lightning, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration or improper application of the equipment. The foregoing warranty shall apply only to the original buyer, and is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Digital Security Controls Ltd. This warranty contains the entire warranty. Digital Security Controls Ltd. neither assumes, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

In no event shall Digital Security Controls Ltd. be liable for any direct or indirect or consequential damages, loss of anticipated profits, loss of time or any other losses incurred by the buyer in connection with the purchase, installation or operation or failure of this product.

**Warning:** Digital Security Controls Ltd. recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

**FCC COMPLIANCE STATEMENT**

**CAUTION:** Changes or modifications not expressly approved by Digital Security Controls Ltd. could void your authority to use this equipment.

This equipment generates and uses radio frequency energy and if not installed and used properly, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for Class B device in accordance with the specifications in Subpart 'B' of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in any residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to television or radio reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna
- Relocate the alarm control with respect to the receiver
- Move the alarm control away from the receiver
- Connect the alarm control into a different outlet so that alarm control and receiver are on different circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.



© 1996 Digital Security Controls Ltd.


# Installation Instructions

The PC5204 can be used to provide up to 1.0A of additional current and can be used to add up to four high current programmable outputs to the PC5010 control panel (see PC5010 Installation Manual for complete installation instructions).

## Specifications

- Module Current Draw: 20mA
- Auxiliary Current: 1.0A continuous rating, 3.0A short term if backup battery connected (PTC protected - fuseless design)
- Outputs: each output can sink up to 3.0A
- Transformer requirements: 16.5V, 40VA
- Battery requirements: 4Ah minimum

## Terminal Descriptions

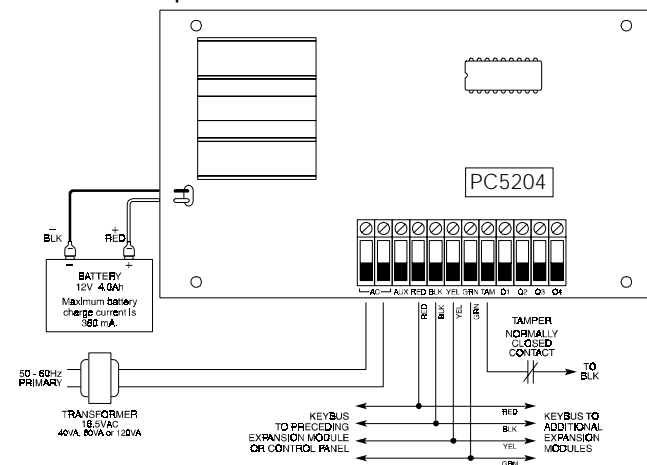

**AC** - The PC5204 requires a 16V, 40VA transformer. Connect the transformer to an unswitched AC source and connect the transformer to these terminals.

**AUX** - This terminal is used to provide power for devices. Maximum current draw is not to exceed 1.0A continuous or 3.0A short term (with a back up battery connected). Connect the positive lead of powered devices to AUX and the negative to the proper output terminal (O1 to O4).

**TAM** - This can be used to tamper the cabinet the PC5204 is mounted in. Connect a normally closed (NC) switch across TAM and BLK. If the tamper is not being used connect a piece of wire across TAM and BLK to remove the trouble condition.

**Keybus**- The 4-wire Keybus connection is used by the panel to communicate with the module. Connect the RED, BLK, YEL and GRN terminals to the RED, BLK, YEL and GRN Keybus terminals on the PC5010 control panel.



PC5204  
Power Supply /  
Four High Current Outputs Module  
Version 1.0